



CAMERAS - SETTING GPS & ALERT MONITORING


1 Log in to Learn using **Agency Manager** credentials




2 Select **System Management** from the right-hand side menu




3 Check the box next to the system you want to configure

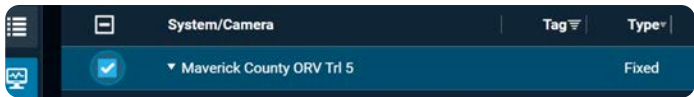


4 On the far right side, select the **three dots** menu

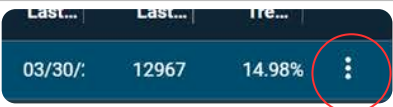

5 Select **Edit System**

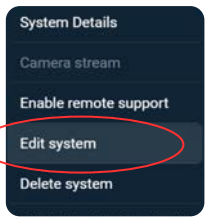


6 Select **Cameras**

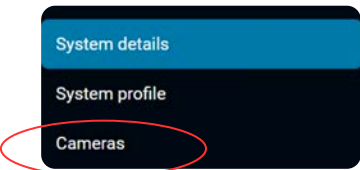


7 Configure the desired:

- Alert type
- Alert frequency

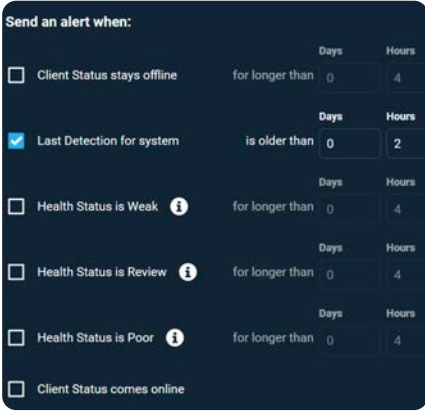


8 Add your user under recipients and add: **alerts2@vettedsecuritysolutions.com** in the **External Email** field

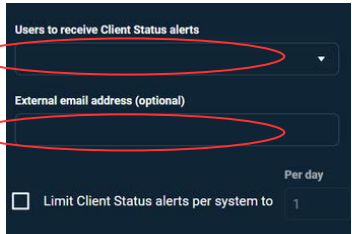


- Set the daily alert limit at your discretion

9 To configure GPS coordinates, select the **three dots** next to the desired camera

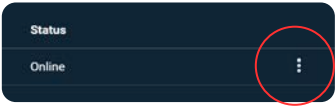

10

- Enter:
 - Camera Name
 - IP / Camera Type
 - Host is the IP Address
- Set the GPS coordinates
- Check **Apply to Detections**
- Select **Save Camera**

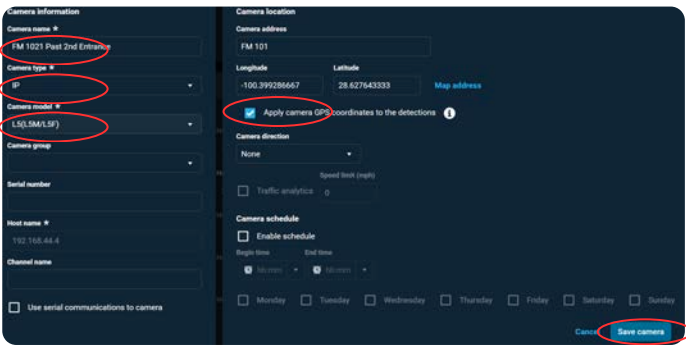

11 Select **Save System** in the top-right corner to complete setup



Submit a Support Ticket
vettedsecuritysolutions.com/support

Support Line
(727) 440-3245
M-F, 8AM – 5 PM EST