



Wanco Speed Director ICC Controller

LOGGING IN:

Press the Lock Icon to open the password screen









Default passwords:

High Level: administrator

User Level: abcd

Wanco Speed Director









Version: 20200805 - v7.40.4.0

Message On Sign 	Radar  Radar : Off Display : Off	Classifier  Class : Off Align Classifier Tune Class Type	STATUS    
User: Log In 			

Once logged in the screen will open your options and selections will become light gray
(Example: Administrator mode allows for alignment and tuning of optional data classifier)

Wanco Speed Director

Version: 20200805 - v7.40.4.0





Message On Sign 	Radar  Radar : Off Display : Off	Classifier  Class : On Align Classifier Tune Class Type	STATUS    
User: Admin 			

OPERATION (SPEED MODE):

To operate the radar trailer in Speed Mode please select Radar ON, Display SPEED. Set your speed limit to match the road's speed limit, Excess Speed should be 10-12 MPH over Speed Limit

Wanco Speed Director

Version: 20200805 - v7.40.4.0

Message On Sign 	Radar  Radar : On Display : Speed Limit : 40 Excess : 53	Classifier  Class : On Align Classifier Tune Class Type	STATUS 
User: Admin 			





Display will show oncoming vehicles speed. When over speed the unit will flash and if above excess speed will blank

OPERATION (MESSAGE DISPLAY):

To operate the radar trailer as a small format message sign please turn radar OFF, Display to MSG (Message). Select Quick Message to type a limit display message such as SLOW DOWN.

Wanco Speed Director

Version: 20200805 - v7.40.4.0

Message On Sign 	Radar  Radar : Off Display : Msg Quick Message Message Menu	Classifier  Class : On Align Classifier Tune Class Type	STATUS 
User: Admin 