
Starlink Case Quick Deployment Guide


Accessories · https://vettedsecuritysolutions.com/docs/starlink-case-quick-deployment-guide/

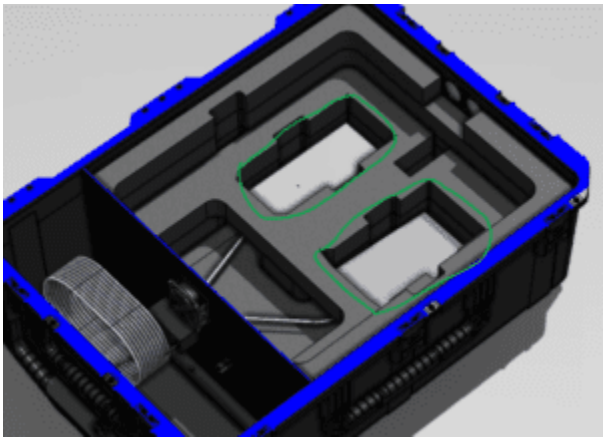


- Open case, add power supply, and router into slots in foam.




- Plug in the power supply and router into the outlet on the wall, and plug in the Ethernet cable to jack on metal wall and power supply.

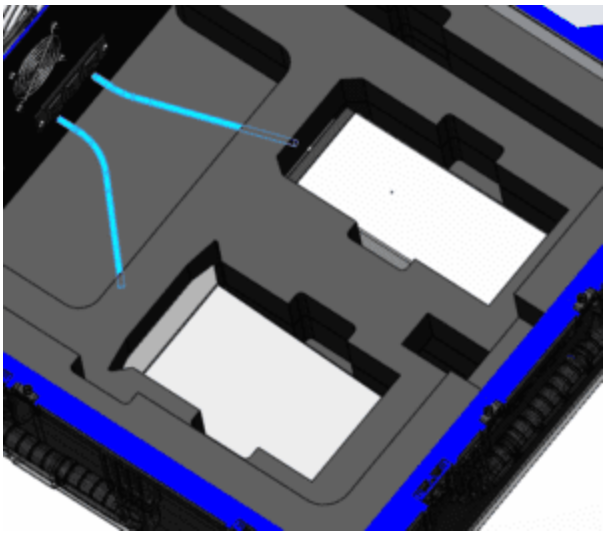


- Pass through external Ethernet cable and plug into metal wall.

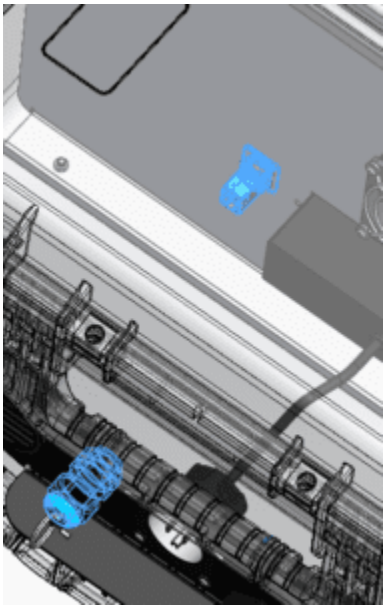


- Plug in antenna cable to power supply and pass it through both walls.

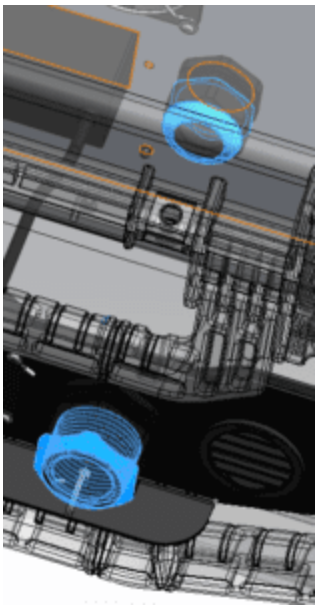

- Plug in antenna, place it on the top of the case, drop the rubber water seal over cap and tighten.

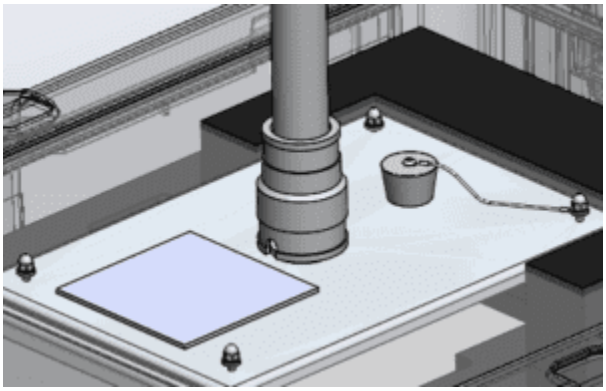


- Plug in the Ethernet and connect the AC plug to a power source.

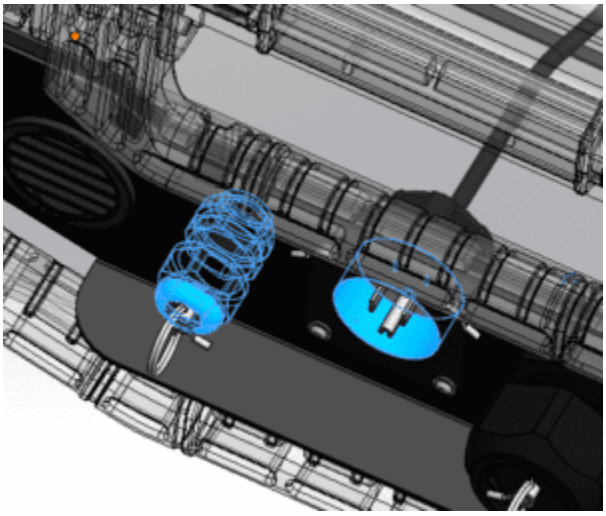

STOW INSTRUCTIONS


- Make sure to set Starlink antenna to **stow mode** on your devise.
- Remove antenna from the top of the case, unplug the AC Power, antenna cable, and internal cables from the power supply and router.
- Remove the foam insert with the power supply and router.

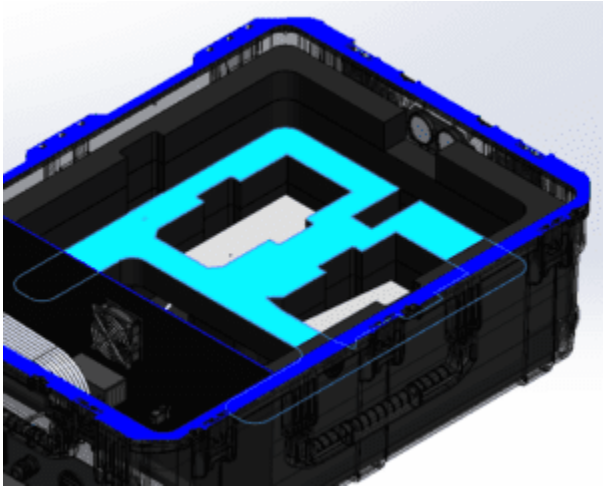

- Place the antenna into the case as shown in the picture.



- Place the foam insert on top of the antenna as shown in the picture.

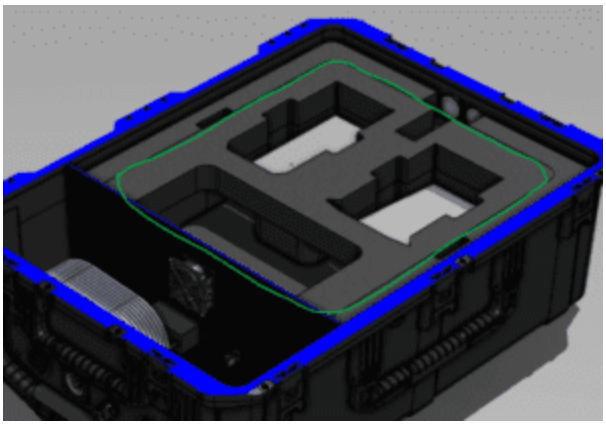

Vetted Security Solutions Support

The Vetted Security Solutions Support team is committed to answering all your day-to-day questions as quickly as possible. Please see the steps below for the support process:

1. Go to https://vettedsecuritysolutions.com/support/
2. Click on the "Support Ticket" Icon.
3. Choose from the following options: LPR Technical Support, License Key Request, Account Management, CCTV and Surveillance, Thermal Camera Support, or Other Questions.
4. When opening a support ticket, if you have multiple physical sites and or equipment impacted, please create an individual ticket for each. Do not bundle multiple different physical sites/equipment in the same support ticket.
5. Please provide the following information: Your Name (Contact Name), Phone Number, Email, Company/Department, a summary, and a detailed description of the issue you are having. Attachments are optional.
6. Press send to notify our help desk, and a confirmation email will be sent to the email address that you have provided.
7. Once the ticket is updated/ or closed, it will send you an email notifying you that the support request has been modified/ or completed.

For issues requiring immediate technical support, please call the Vetted Security Solutions office number at (727) 440-3245 Ext 1.